TXS-900HT

Bestell-Nr. • Order No. 25.5260



IMG STAGELINE

WWW.IMGSTAGELINE.COM

ELECTRONICS FOR SPECIALISTS ELECTRONICS FOR SPECIALISTS ELECTRONICS FOR SPECIALISTS ELECTRONICS FOR SPECIALISTS ELECTRONICS FOR SPECIALISTS ELECTRONICS FOR SPECIALISTS ELECTRONICS FOR

Deutsch

Funk-Handmikrofon

823 – 832 MHz und 863 – 865 MHz

Diese Anleitung richtet sich an Benutzer ohne besondere Fachkenntnisse. Bitte lesen Sie die Anleitung vor dem Betrieb gründlich durch und heben Sie sie für ein späteres Nachlesen auf.

1 Verwendungsmöglichkeiten

Dieses Handmikrofon mit integriertem Sender bildet mit dem Empfänger TXS-900 oder TXS-920 ein drahtloses Audioübertragungssystem.

1.1 Konformität und Zulassung

Hiermit erklärt MONACOR INTERNATIONAL, dass das Funkmikrofon TXS-900HT der Richtlinie 2014/53/EU entspricht. Die EU-Konformitätserklärung ist im Internet verfügbar:

www.img-stageline.de

Frequenzbereich 863 – 865 MHz:
Anmelde-und gebührenfrei in den EU- und EFTA-Staaten.

Frequenzbereich 823 – 832 MHz:
Es bestehen Beschränkungen oder Anforderungen in folgenden Ländern:

	CZ	FR	LT	PL	SE	UK	

2 Wichtige Hinweise

Das Gerät entspricht allen relevanten Richtlinien der EU und trägt deshalb das CE-Zeichen.

- Setzen Sie das Gerät nur im Innenbereich ein und schützen Sie es vor Tropf- und Spritzwasser, hoher Luftfeuchtigkeit und Hitze (zulässiger Einsatztemperaturbereich 0 – 40 °C).
- Um das Gerät vor Beschädigung durch auslaufende Batterien zu schützen, nehmen Sie diese bei längerem Nichtgebrauch heraus.
- Verwenden Sie zum Reinigen nur ein trockenes, weiches Tuch, niemals Wasser oder Chemikalien.
- Wird das Gerät zweckentfremdet, falsch bedient oder nicht fachgerecht repariert, kann keine Haftung für daraus resultierende Sach- oder Personenschäden und keine Garantie für das Gerät übernommen werden.

Soll das Gerät endgültig aus dem Betrieb genommen werden, übergeben Sie es zur umweltgerechten Entsorgung einem örtlichen Recyclingbetrieb.

Verbrauchte Batterien dürfen nicht im Hausmüll entsorgt werden. Geben Sie sie nur in den Sondermüll (z. B. Sammelbehälter beim Fachhändler).

3 Bedienelemente

1 Display, zeigt
- – den eingestellten Kanal: CH 001 … CH 442 (☞ Abb. 3)
- – den Zustand der Batterien: BATT ▬▬▬
  Blinkt die Anzeige BATT, sind die Batterien fast verbraucht.

2 Taste SYNC zum Einstellen des Mikrofons auf den Übertragungskanal des Empfängers, zugängig nach dem Abschrauben der Schutzhülse (3)
1. Die Taste SYNC gedrückt halten, sodass im Display des Empfängers die Anzeige SYNC blinkt.
   (Das Mikrofon muss nicht eingeschaltet sein.)
2. Am Empfänger gleichzeitig kurz die Taste SYNC drücken: Das Mikrofon wird auf den Kanal des Empfängers eingestellt und ist danach eingeschaltet.

Beim Einstellen dürfen das Mikrofon und der Empfänger nicht weiter als 1 m voneinander entfernt sein.

3 Schutzhülse
Nach dem Abschrauben sind das Batteriefach und die Taste SYNC (2) zugängig.

4 Kontroll-LED
- rot = Mikrofon eingeschaltet
- blau = Mikrofon stummgeschaltet
- blinkt = Batterien fast verbraucht, verbleibende Betriebsdauer weniger als 10 Minuten

5 Taste zum Ein-/Ausschalten (ca. 1 Sekunde gedrückt halten) und zum Stummschalten/Wiedereinschalten des Tons (kurz drücken)

6 Batteriehalter, zugängig nach dem Abschrauben der Schutzhülse (3)
Zum Einsetzen der Batterien den Halter aufklappen. Dazu auf die Vorderkante drücken (siehe Pfeil in der Abb. 2), damit er entriegelt wird. Die Batterien so herum, wie im Fach angegeben, einsetzen. Den Halter wieder zuklappen, sodass er einrastet.

4 Technische Daten

Funkfrequenzbereich:	823 – 832 MHz und 863 – 865 MHz (☞ Abb. 3)
Sendeleistung:	10 mW (EIRP)
Frequenzstabilität:	±0,005 %
Mikrofontyp:	Kondensatormikrofon
Richtcharakteristik:	Niere
Audiofrequenzbereich:	80 – 18 000 Hz
Stromversorgung:	2 × 1,5-V-Batterie, Mignon (AA)
Betriebsdauer:	> 15 h
Abmessungen:	Ø 53 mm × 260 mm
Gewicht:	220 g

Änderungen vorbehalten.

English

Wireless Hand-Held Microphone

823 – 832 MHz and 863 – 865 MHz

These instructions are intended for users without any specific technical knowledge. Please read these instructions carefully prior to operation and keep them for later reference.

1 Applications

Combined with the receiver TXS-900 or TXS-920, this hand-held microphone with integrated transmitter provides a wireless audio transmission system.

1.1 Conformity and approval

Herewith, MONACOR INTERNATIONAL declare that the wireless microphone TXS-900HT complies with the directive 2014/53/EU. The EU declaration of conformity is available on the Internet:

www.img-stageline.com

Frequency range 863 – 865 MHz:
No licence or registration required in the EU and EFTA countries.

Frequency range 823 – 832 MHz:
Restrictions or requirements apply in the following countries:

	CZ	FR	LT	PL	SE	UK	

2 Important Notes

The unit corresponds to all relevant directives of the EU and is therefore marked with CE.

- The unit is suitable for indoor use only. Protect it against dripping water and splash water, high air humidity and heat (admissible ambient temperature: 0 – 40 °C).
- To protect the unit against damage due to battery leakage, always remove the batteries when the unit is not in use for a longer period of time.
- For cleaning only use a dry, soft cloth; never use water or chemicals.
- No guarantee claims for the unit and no liability for any resulting personal damage or material damage will be accepted if the unit is used for other purposes than originally intended, if it is not correctly operated, or if it is not repaired in an expert way.

If the unit is to be put out of operation definitively, take it to a local recycling plant for a disposal which is not harmful to the environment.

Never put discharged batteries in the household waste; always take them to a special waste disposal, e. g. collection container at your retailer.

3 Operating Elements

1 Display to indicate
- – the channel adjusted: CH 001 … CH 442 (☞ fig. 3)
- – the battery status: BATT ▬▬▬
  When the indication BATT starts flashing, the batteries are almost discharged.

2 Button SYNC to set the microphone to the transmission channel of the receiver; to access the button, unscrew the protective sleeve (3)
1. Keep the button SYNC pressed so that the indication SYNC starts flashing on the display of the receiver. (It is not necessary to switch on the microphone.)
2. Briefly press the button SYNC on the receiver at the same time: The microphone will be set to the channel of the receiver; it is switched on after that.

When making the settings, the distance between the microphone and the receiver must not exceed 1 m.

3 Protective sleeve
Unscrew the protective sleeve to access the battery compartment and the button SYNC (2).

4 LED indicator
- red = microphone switched on
- blue = microphone muted
- flashing = batteries almost discharged, remaining operating time less than 10 minutes


5 Button to switch the microphone on/off (keep button pressed for approx. 1 second) and to mute/unmute the sound (press button briefly)

6 Battery holder; to access the holder, unscrew the protective sleeve (3)
To insert the batteries, open the holder: Press the front edge (see arrow in fig. 2) to unlock the latch. Insert the batteries as indicated in the compartment. Then close the holder to lock the latch.


4 Specifications

Radio frequency range:	823 – 832 MHz and 863 – 865 MHz (☞ fig. 3)
Transmission power:	10 mW (EIRP)
Frequency stability:	±0.005 %
Microphone type:	condenser microphone
Polar pattern:	cardioid
Audio frequency range:	80 – 18 000 Hz
Power supply:	2 × 1.5 V battery, size AA
Operating time:	> 15 h
Dimensions:	Ø 53 mm × 260 mm
Weight:	220 g

Subject to technical modification

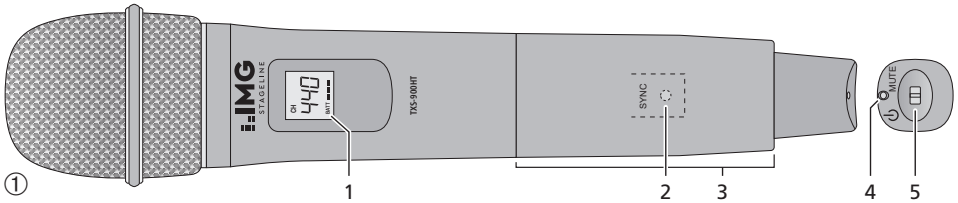

①

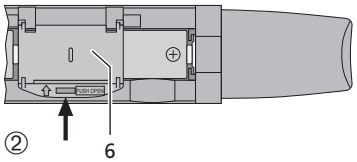

②

Kanal • Channel	Frequenz • Frequency	Kanal • Channel	Frequenz • Frequency
CH 001	823,000 MHz	CH 362	863,000 MHz
CH 002	823,025 MHz	CH 363	863,025 MHz
CH 003	823,050 MHz	CH 364	863,050 MHz
CH 004	823,075 MHz	CH 365	863,075 MHz
CH 005	823,100 MHz	CH 366	863,100 MHz
…	…	…	…
CH 360	831,975 MHz	CH 441	864,975 MHz
CH 361	832,000 MHz	CH 442	865,000 MHz

③

 Copyright© by MONACOR INTERNATIONAL. All rights reserved.